


AMUN 716 KNX Room Air Sensor

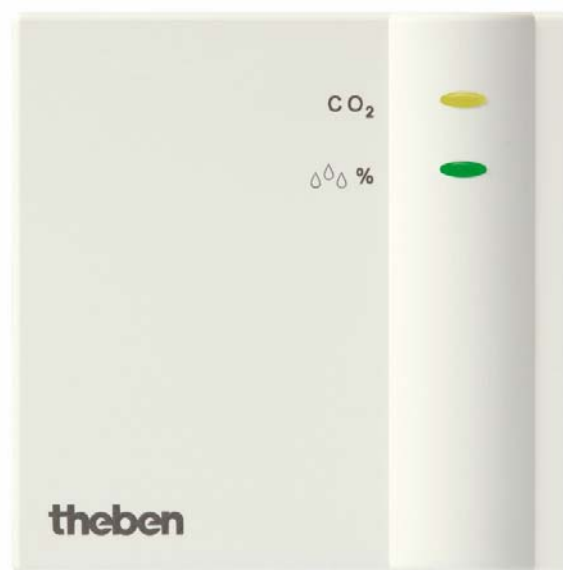

AMUN 716 KNX

716 9 200

Contents

1	Functional characteristics	3
1.1	Operation	3
1.2	Benefits	3
2	Technical data	4
2.1	Technical data.....	4
3	Amun 716 V1.0 application program	5
3.1	Selection in the product database	5
3.2	Communication objects	6
3.2.1	Description of objects.....	9
3.3	Parameters	14
3.3.1	Overview	14
3.3.2	The Measured values <i>parameter page</i>	15
3.3.3	The <i>CO₂threshold</i> parameter page	16
3.3.4	The <i>1, 2, 3 CO₂ thresholds</i> parameter pages	17
3.3.5	The <i>ventilation CO₂threshold</i> parameter page	19
3.3.6	The <i>CO₂scenes</i> parameter page.....	20
3.3.7	The humidity threshold <i>parameter page</i>	21
3.3.8	The <i>1, 2, 3 humidity</i> thresholds parameter pages	22
3.3.9	The Humidity ventilation <i>parameter page</i>	24
3.3.10	The Relative humidity scenes <i>parameter page</i>	25
3.3.11	Temperature threshold <i>parameter page</i>	26
4	Typical applications:	28
4.1	Control of air quality via CO ₂ dependent ventilation.....	28
4.1.1	Devices	28
4.1.2	Overview	28
4.1.3	Objects and links	28
4.1.4	Important parameter settings.....	29
4.2	Control of air quality via CO ₂ and humidity dependent ventilation.....	30
4.2.1	Devices	30
4.2.2	Overview	30
4.2.3	Objects and links	30
4.2.4	Important parameter settings.....	31
4.3	Control of air quality plus 3 stage manual fan control.....	32
4.3.1	Devices	32
4.3.2	Overview	32
4.3.3	Objects and links	33
4.3.4	Important parameter settings.....	34
4.4	Dew point alarm for cooling system	35
4.4.1	Devices	35

4.4.2	Overview	35
4.4.3	Objects and links	36
4.4.4	Important parameter settings	37
5	Appendix	38
5.1	Hysteresis	38
5.2	Switching behaviour of thresholds for CO₂ and humidity	38
5.3	Fan control	39
5.4	Relative humidity	39
5.5	CO₂ guide values.....	40

1 Functional characteristics

Amun 716 is a combined sensor for CO₂, temperature and humidity measurement (relative humidity).

It is designed to monitor air quality in conference/meeting rooms, offices, schools/ kindergartens, passive or low energy houses and living rooms without controlled ventilation.

1.1 Operation

The device does not have to be operated manually.

The LED and the switch for the physical address are accessible when cover is removed. If necessary, the switch can be reached with a thin screwdriver via the upper ventilation slot.

CAUTION: Do not drop the device!

Severe shocks reduce the accuracy of the highly sensitive CO₂ sensor.

1.2 Benefits

- Combined measurement of temperature, humidity and CO₂ content in one device.
- Power supply via bus connection, no mains power required.

2 Technical data

2.1 Technical data

Power supply:	Bus voltage
Permitted operating temperature:	0 °C ... + 45°C
Current draw from bus voltage:	Max. 12 mA
Bus connection:	via bus terminal
Protection class:	III in accordance with EN 60730-1
Protection rating:	IP 20 in accordance with EN 60529
Dimensions of device:	LxWxH 74 x 74 x 28 (mm)

Measuring ranges:

CO ₂	300 – 9999 ppm
Humidity:	1 – 100 %
Temperature:	0 – 40 °C

Accuracy:

CO ₂	300-1000 ppm: +/- 120 ppm 1000-2000 ppm: +/- 250 ppm 2000-5000 ppm: +/- 300 ppm
Humidity:	+/- 5 %
Temperature:	+/- 1 °C (depending on installation)

3 Amun 716 V1.0 application program

3.1 Selection in the product database

Manufacturer	THEBEN AG
Product family	Phys. sensors
Product type	Room air sensor
Program name	<i>Amun 716 CO2; Amun V17 relative humidity and temperature</i>

The ETS database can be found on our download page: <http://www.theben.de>

Table 1

Number of communication objects:	27
Number of group addresses:	128
Number of associations:	128

3.2 Communication objects

Table 2: Overview

No.	Function	Object name	Type & DPT	Flags			
				K	L	S	T
0	Physical value	CO ₂ value	2 byte 9.008	✓	✓		✓
1	Physical value	relative humidity	1 byte 5.001	✓	✓		✓
2	Physical value	Temperature value	2 byte 9.001	✓	✓		✓
3	Switching	CO ₂ threshold 1	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
4	input	Lock CO ₂ threshold 1	1 bit 1.001	✓	✓	✓	
5	Switching	CO ₂ threshold 2	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
6	input	Lock CO ₂ threshold 2	1 bit 1.001	✓	✓	✓	
7	Switching	CO ₂ threshold 3	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
8	input	Lock CO ₂ threshold 3	1 bit 1.001	✓	✓	✓	
9	Value for ventilation actuator	Ventilation of CO ₂	5.001	✓	✓		✓
10	input	Lock ventilation of CO ₂	1 bit 1.001	✓	✓	✓	✓
				K	L	S	T

Continuation:

No.	Function	Object name	Type & DPT	Flags			
				K	L	S	T
11	Scene control	CO ₂ scenes	1 byte 18.001	✓	✓		✓
12	input	Lock CO ₂ scenes	1 bit 1.001	✓	✓	✓	
13	switch	Humidity threshold 1	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
14	input	Lock humidity threshold 1	1 bit 1.001	✓	✓	✓	
15	switch	Humidity threshold 2	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
16	input	Lock humidity threshold 2	1 bit 1.001	✓	✓	✓	
17	switch	Humidity threshold 3	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
18	input	Lock humidity threshold 3	1 bit 1.001	✓	✓	✓	
19	Value for ventilation actuator	Ventilating relative humidity	1-byte 5.001 5.010	✓	✓		✓
20	input	Lock ventilating relative humidity	1 bit 1.001	✓	✓	✓	
21	Scene control	Relative humidity scenes	1 byte 18.001	✓	✓		✓
22	input	Lock relative humidity scenes	1 bit 1.001	✓	✓	✓	
				K	L	S	T

Continuation:

No.	Function	Object name	Type & DPT	Flags			
				K	L	S	T
23	switch	Temperature threshold	1 bit 1.001				
	Valuator		1 byte 5.001 5.010	✓	✓		✓
	Priority		2 bit 2.001				
24	input	Lock temperature threshold	1 bit 1.001	✓	✓	✓	
25	Value for ventilation actuator	highest active ventilation value	1 byte 5.010	✓	✓		✓
26	Switching On/Off	LEDs for CO2 and humidity	1 bit 1.001	✓		✓	
				K	L	S	T

Table 3: Communication flags

Flag	Name	Application
C	Communication	Object can communicate
R	Read	Object status can be viewed (ETS / display etc.)
W	Write	Object can receive
T	Transmit	Object can send

3.2.1 Description of objects

- **Object 0 "CO₂ value"**

This object sends the CO₂ content measured by the sensor (if sending via configuration is permitted).

- **Object 1 "relative humidity value"**

This object sends the current relative humidity measured by the sensor (if sending via configuration is permitted).

- **Object 2 "Temperature value"**

This object sends the temperature currently being measured by the sensor (if sending via configuration is permitted).

- **Object 3 "Threshold 1 CO₂"**

Output object for the first CO₂ threshold.
See [Overview table](#).

- **Object 4 "Lock threshold 1 CO₂"**

Lock object for the first CO₂ threshold.

- **Object 5 "Threshold 2 CO₂"**

Output object for the second CO₂ threshold.
See [Overview table](#).

- **Object 6 "Lock threshold 2 CO₂"**

Lock object for the second CO₂ threshold.

- **Object 7 "Threshold 3 CO₂"**

Output object for the third CO₂ threshold.
See [Overview table](#).

- **Object 8 "Lock threshold 3 CO₂"**

Lock object for the third CO₂ threshold.

- **Object 9 "Ventilation of CO₂"**

Actuating value for ventilation actuator (1 byte telegram).

This object is used if ventilation is only to be activated by the CO₂ content, such as in conference rooms.

Important: The configuration of the input as a percentage value or as number from 0 to 255 is irrelevant for the ventilation actuator.

- **Object 10 "Lock CO₂ ventilation"**

Lock object for CO₂ dependent ventilation

1 = Lock

0 = Enable

- Object 11 "*CO₂scenes*"

Transmits the CO₂ dependent scene retrieval code

Table 4

Scene no.	Retrieval code		Scene no.	Retrieval code	
	Hex	Dec		Hex	Dec
1	\$00	0	33	\$20	32
2	\$01	1	34	\$21	33
3	\$02	2	35	\$22	34
4	\$03	3	36	\$23	35
5	\$04	4	37	\$24	36
6	\$05	5	38	\$25	37
7	\$06	6	39	\$26	38
8	\$07	7	40	\$27	39
9	\$08	8	41	\$28	40
10	\$09	9	42	\$29	41
11	\$0A	10	43	\$2A	42
12	\$0B	11	44	\$2B	43
13	\$0C	12	45	\$2C	44
14	\$0D	13	46	\$2D	45
15	\$0E	14	47	\$2E	46
16	\$0F	15	48	\$2F	47
17	\$10	16	49	\$30	48
18	\$11	17	50	\$31	49
19	\$12	18	51	\$32	50
20	\$13	19	52	\$33	51
21	\$14	20	53	\$34	52
22	\$15	21	54	\$35	53
23	\$16	22	55	\$36	54
24	\$17	23	56	\$37	55
25	\$18	24	57	\$38	56
26	\$19	25	58	\$39	57
27	\$1A	26	59	\$3A	58
28	\$1B	27	60	\$3B	59
29	\$1C	28	61	\$3C	60
30	\$1D	29	62	\$3D	61
31	\$1E	30	63	\$3E	62
32	\$1F	31	64	\$3F	63

- Object 12 "*Lock CO₂ vent*"

Lock object for the CO₂ scenes.

1 = Lock

0 = Enable

- **Object 13 "Humidity threshold 1"**

Output object for the first humidity threshold.

See [Overview table](#).

- **Object 14 " Lock humidity threshold 1 "**

Lock object for the first CO₂ humidity threshold.

- **Object 15 "Humidity threshold 2 "**

Output object for the second humidity threshold.

See [Overview table](#).

- **Object 16 " Lock humidity threshold 2"**

Lock object for the second CO₂ humidity threshold.

- **Object 17 "Humidity threshold 3"**

Output object for the third humidity threshold.

See [Overview table](#).

- **Object 18 " Lock humidity threshold 3"**

Lock object for the third CO₂ humidity threshold.

- **Object 19 "Ventilating relative humidity"**

Actuating value for ventilation actuator (1 byte telegram).

This object is used if ventilation is only to be activated by the relative humidity, such as in a conservatory.

Important: The configuration of the input as a percentage value or as number from 0 to 255 is irrelevant for the ventilation actuator.

- **Object 20 "Lock ventilating relative humidity"**

Lock object for humidity dependent ventilation

1 = Lock

0 = Enable

- **Object 21 "Relative humidity scenes"**

Sends the humidity dependent scene retrieval code .
See above, [Table 4](#).

- **Object 22 "Lock relative humidity scenes"**

Lock object for the humidity scenes.

1 = Lock

0 = Enable

- **Object 23 "Temperature threshold"**

Output object for the temperature threshold.

See [Overview table](#).

- **Object 24 "Lock temperature threshold"**

Lock object for humidity dependent ventilation

1 = Lock

0 = Enable

- **Object 25 "Highest active ventilation value"**

Actuating value for ventilation actuator (1 byte telegram).

This object is used if ventilation is to be activated by CO₂ content and relative humidity.

The actuating values of object 9 and object 19 are monitored and the highest actuating is always sent.

Important: The configuration of the input as a percentage value or as number from 0 to 255 is irrelevant for the ventilation actuator.

- **Object 26 "LEDs for CO2 and humidity"**

Activates or deactivates the LEDs to display the CO₂ and humidity thresholds.

This option is applied on the [Measured values](#) parameter page.

0 = Switch LEDs off completely

1 = Operate LEDs.

3.3 Parameters

3.3.1 Overview

Table 5

Name	Description
<i>Measured values</i>	Settings for sending CO ₂ content, relative humidity and temperature
<i>CO₂ thresholds</i>	Setting the 3 CO ₂ thresholds
<i>Thresholds 1, 2, 3 CO₂</i>	Setting of response to exceeding or not reaching the relevant CO ₂ threshold.
<i>Ventilating CO₂</i>	Setting of ventilation speed depending on CO ₂ content
<i>CO₂ scenes</i>	Setting of scene numbers to be sent depending on CO ₂ content
<i>Humidity thresholds</i>	Setting of the 3 humidity thresholds
<i>Humidity thresholds 1, 2, 3</i>	Setting of response to exceeding or not reaching the relevant humidity threshold.
<i>Ventilating humidity</i>	Setting of ventilation speed depending on relative humidity
<i>Humidity scenes</i>	Setting of scene numbers to be sent depending on relative humidity
<i>Temperature threshold</i>	Setting of temperature threshold and reaction to exceeding or under-running.

3.3.2 The Measured values *parameter page*

Table 6

Designation	Values	Application
<i>CO₂ content sends on change in</i>	<i>not due to a change</i> <i>100 ppm</i> <i>200 ppm</i> <i>300 ppm</i> <i>500 ppm</i>	only send cyclically (if enabled) Send if the value has changed since the last transmission by the selected amount
<i>Send CO₂ content cyclically</i>	<i>do not send cyclically</i> <i>every minute</i> <i>every 2 minutes</i> <i>every 3 minutes</i> ... <i>every 30 minutes</i> <i>every 45 minutes</i> <i>every 60 minutes</i>	How often should the current measured value be resent?
<i>Send humidity value in the event of a change in</i> ...	<i>not due to a change</i> <i>2 %</i> <i>3 %</i> <i>5 %</i> <i>10%</i>	only send cyclically (if enabled) Send if the value has changed since the last transmission by the selected amount
<i>Send humidity value cyclically</i>	<i>do not send cyclically</i> <i>every minute</i> <i>every 2 minutes</i> <i>every 3 minutes</i> ... <i>every 30 minutes</i> <i>every 45 minutes</i> <i>every 60 minutes</i>	How often should the current measured value be resent?
<i>LEDs for CO₂ and humidity</i>	<i>always off</i> <i>always on</i> <i>switchable via object 26</i>	The LEDs are not used The LEDs display the current thresholds. If necessary, the LEDs can be activated or switched off via a switching command to object 26. Typical application: Switch LEDs off overnight with a timer.
<i>Transmit temperature in the event of change of</i>	<i>not due to a change</i> <i>0.5 , 1.0</i> <i>1.5 °C, 2.0 °C</i> <i>2.5 °C</i>	only send cyclically (if enabled) Send if the value has changed since the last transmission by the selected amount

Continuation:

Designation	Values	Application
<i>Send temperature cyclically</i>	<i>do not send cyclically</i> <i>every minute</i> <i>every 2 minutes</i> <i>every 3 minutes</i> <i>...</i> <i>every 30 minutes</i> <i>every 45 minutes</i> <i>every 60 minutes</i>	At what time interval are the cyclic telegrams to be sent again?
<i>Temperature calibration in 0.1°C stages (-64..64)</i>	manual input: - 64 .. 64	Adjustment to temperature measurement if sent temperature deviates from actual temperature. Example: Temperature = 20°C sent temperature = 21°C Adjustment value = 10 (i.e. 10 x 0.1°C)

3.3.3 The CO₂threshold parameter page

Essential condition for setting thresholds:

Threshold 1 must always be smaller than *threshold 2* and *threshold 2* smaller than *threshold 3*.

Table 7

Designation	Values	Application
CO ₂ threshold 1 (in 10 ppm)	manual input: 10 .. 255	Input of first CO ₂ threshold value in 10 ppm. Example: 20 is equivalent to 200 ppm
Hysteresis	100 ppm 200 ppm 300 ppm 500 ppm	The hysteresis prevents frequent switching after small changes in measured values. See accessories: Hysteresis
CO ₂ threshold 2 (in 10 ppm)	manual input: 10 .. 255	Input of second CO ₂ threshold
Hysteresis	see above	see above
CO ₂ threshold 3 (in 10 ppm)	manual input: 10 .. 255	Input of third CO ₂ threshold

3.3.4 The 1, 2, 3 CO₂ thresholds parameter pages

The parameters are identical for all three CO₂ thresholds.
 Threshold 1 is given as an example.

Table 8

Designation	Values	Application
Telegram type for CO ₂ threshold 1	<i>Switching command</i> <i>Priority</i> <i>Value as percentage</i> <i>Value from 0 to 255</i>	The threshold sends: Switching telegrams Priority telegrams A percentage value Important: See appendix Fan control Any desired value between 0 and 255
If CO ₂ threshold 1 is exceeded	<i>no telegram</i> <i>send following telegram once</i> <i>send cyclically</i>	Response to exceeding threshold
Telegram	<i>Switch-on command</i> <i>Switch-off command</i>	What is sent if the threshold is exceeded or under-run? The parameter values depend on the the type of telegram selected: With <i>switching command</i>
	<i>no priority</i> <i>OFF (up)</i> <i>ON (down)</i>	With <i>priority</i>
	<i>0%, 5%, 10%, 15%, 20%, 25%</i> <i>30%, 35%, 40%, 45%, 50%</i> <i>55%, 60%, 65%, 70%, 75%</i> <i>80%, 85%, 90%, 95%, 100%</i>	With <i>percentage value</i>
	<i>manual input: 0 .. 255</i>	With <i>Value from 0 to 255</i>
If CO ₂ threshold 1 is under-run	<i>no telegram</i> <i>send following telegram once</i> <i>send cyclically</i>	Response to under-running threshold
Telegram	see above	see above
Cycle time for CO ₂ threshold 1 (if available)	<i>every minute, every 2 minutes</i> <i>every 3 minutes, every 5 minutes</i> <i>every 10 minutes, every 15 minutes</i> <i>every 20 minutes, every 30 minutes</i> <i>every 45 minutes, every 60 minutes</i>	At what time interval are the cyclic telegrams to be sent again?

Continuation:

Designation	Values	Application
Behaviour when setting the lock	<i>Ignore lock</i> <i>do not send</i> <i>as with under-run threshold</i> <i>as with exceeded threshold</i>	This threshold cannot be locked The threshold will not send as long as the lock object is set When setting the lock object, the threshold sends the same telegram as with threshold under-run. When setting the lock object, the threshold sends the same telegram as with exceeding the threshold.
Behaviour when cancelling the lock	<i>do not send</i> <i>update</i>	no reaction send current status

3.3.5 The ventilation CO₂threshold parameter page

Table 9

Designation	Values	Application
<i>Send given value:</i>	<i>(Input as number from 0 to 255)</i> <i>(Input as percentage)</i>	Input format for fan control. This setting is not relevant for the actuator.
<i>if CO₂ smaller threshold 1</i>	manual input 0..255 or 0..100 %	Setting of desired ventilation speeds depending on CO ₂ content.
<i>if CO₂ between threshold 1 and 2</i>	manual input 0..255 or 0..100 %	
<i>if CO₂ between threshold 2 and 3</i>	manual input 0..255 or 0..100 %	
<i>if CO₂ greater threshold 3</i>	manual input 0..255 or 0..100 %	
<i>Behaviour when setting the lock</i>	<i>Ignore lock</i> <i>do not send</i> <i>send following value</i>	This threshold cannot be locked The threshold will not send as long as the lock object is set Send a value when setting lock object.
<i>Value if locked</i>	<i>0%, 5%, 10%, 15%, 20%, 25%</i> <i>30%, 35%, 40%, 45%, 50%</i> <i>55%, 60%, 65%, 70%, 75%</i> <i>80%, 85%, 90%, 95%, 100%</i>	Value to be sent when the lock object is set
<i>Behaviour when cancelling the lock</i>	<i>do not send</i> <i>update</i>	no reaction send current fan actuating value

3.3.6 The CO₂scenes parameter page

Send given scene if:

Table 10:

Designation	Values	Application
<i>CO₂ smaller threshold 1</i>	<i>Scene 1 .. scene 64</i>	Setting of scene numbers to be sent depending on CO ₂ content.
<i>CO₂ between threshold 1 and 2</i>	<i>Scene 1 .. scene 64</i>	
<i>CO₂ between threshold 2 and 3</i>	<i>Scene 1 .. scene 64</i>	
<i>CO₂ greater threshold 3</i>	<i>Scene 1 .. scene 64</i>	
<i>Behaviour when setting the lock</i>	<i>Ignore lock</i> <i>do not send</i> <i>send scene</i>	The scene object cannot be locked The scene object will not send as long as the lock object is set Send a value when setting lock object.
<i>scene if locked</i>	<i>Scene 1 .. scene 64</i>	Scene to be sent when the lock object is set
<i>Behaviour when cancelling the lock</i>	<i>do not send</i> <i>update</i>	no reaction send current scene

3.3.7 The humidity threshold *parameter page*

Essential condition for setting thresholds:

Threshold 1 must always be smaller than *threshold 2* and *threshold 2* smaller than *threshold 3*.

Table 11

Designation	Values	Application
<i>Relative humidity threshold 1 (in %)</i>	Manual input 0 ..0.100	Input of the first humidity threshold value in percent.
<i>Hysteresis</i>	1 %, 2 %, 3 % 5 %, 7 %, 10 %	The hysteresis prevents frequent switching after small changes in measured values. See accessories: Hysteresis
<i>Relative humidity threshold 2 (in %)</i>	Manual input 0 ..0.100	Input of the second humidity threshold value in percent.
<i>Hysteresis</i>	1 %, 2 %, 3 % 5 %, 7 %, 10 %	see above.
<i>Relative humidity threshold 3 (in %)</i>	Manual input 0 ..0.100	Input of the third humidity threshold value in percent.
<i>Hysteresis</i>	1 %, 2 %, 3 % 5 %, 7 %, 10 %	see above.

3.3.8 The 1, 2, 3 humidity thresholds parameter pages

Table 12

Designation	Values	Application
Telegram type for humidity threshold 1	<i>Switching command</i> <i>Priority</i> <i>Value as percentage</i> <i>Value from 0 to 255</i>	The threshold sends: Switching telegrams Priority telegrams A percentage value Important: See appendix Fan control Any value between 0 and 255
If humidity threshold 1 is exceeded	<i>no telegram</i> <i>send following telegram once</i> <i>send cyclically</i>	Response to exceeding threshold
Telegram	<i>Switch-on command</i> <i>Switch-off command</i>	What is sent if the threshold is exceeded or under-run? The parameter values depend on the type of telegram selected: With <i>switching command</i>
	<i>no priority</i> <i>OFF (up)</i> <i>ON (down)</i>	With <i>priority</i>
	<i>0%, 5%, 10%, 15%, 20%, 25%</i> <i>30%, 35%, 40%, 45%, 50%</i> <i>55%, 60%, 65%, 70%, 75%</i> <i>80%, 85%, 90%, 95%, 100%</i>	With <i>percentage value</i>
	<i>manual input: 0 .. 255</i>	With <i>Value from 0 to 255</i>
If humidity threshold 1 is under-run	<i>no telegram</i> <i>send following telegram once</i> <i>send cyclically</i>	Response to under-running threshold
Telegram	see above	see above
Cycle time for humidity threshold 1 (if available)	<i>every minute, every 2 minutes</i> <i>every 3 minutes, every 5 minutes</i> <i>every 10 minutes, every 15 minutes</i> <i>every 20 minutes, every 30 minutes</i> <i>every 45 minutes, every 60 minutes</i>	At what time interval are the cyclic telegrams to be sent again?

Continuation:

Designation	Values	Application
Behaviour when setting the lock	<i>Ignore lock</i> <i>do not send</i> <i>as with under-run threshold</i> <i>as with exceeded threshold</i>	This threshold cannot be locked The threshold will not send as long as the lock object is set When setting the lock object, the threshold sends the same telegram as with threshold under-run. When setting the lock object, the threshold sends the same telegram as with exceeding the threshold.
Behaviour when cancelling the lock	<i>do not send</i> <i>update</i>	no reaction send current status

3.3.9 The Humidity ventilation *parameter page*

Table 13

Designation	Values	Application
<i>Send given value:</i>	<i>(Input as number from 0 to 255)</i> <i>(Input as percentage)</i>	Input format for fan control. This setting is not relevant for the actuator.
<i>if relative humidity is less than threshold 1</i>	manual input 0..255 or 0..100 %	Ventilation speeds depending on relative humidity
<i>if relative humidity between thresholds 1 and 2</i>	manual input 0..255 or 0..100 %	
<i>if relative humidity between thresholds 2 and 3</i>	manual input 0..255 or 0..100 %	
<i>if relative humidity is greater than threshold 3</i>	manual input 0..255 or 0..100 %	
<i>Behaviour when setting the lock</i>	<i>Ignore lock</i>	This threshold cannot be locked
	<i>do not send</i>	The threshold will not send as long as the lock object is set
	<i>send following value</i>	Send a value when setting lock object.
<i>Value if locked</i>	<i>0%, 5%, 10%, 15%, 20%, 25%</i> <i>30%, 35%, 40%, 45%, 50%</i> <i>55%, 60%, 65%, 70%, 75%</i> <i>80%, 85%, 90%, 95%, 100%</i>	Value to be sent when the lock object is set
<i>Behaviour when cancelling the lock</i>	<i>do not send</i> <i>update</i>	no reaction send current fan actuating value

3.3.10 The Relative humidity scenes *parameter page*

Send given scene if:

Table 14:

Designation	Values	Application
<i>relative humidity is less than threshold 1</i>	<i>Scene 1 .. scene 64</i>	Setting of scene numbers to be sent depending on relative humidity
<i>relative humidity between thresholds 1 and 2</i>	<i>Scene 1 .. scene 64</i>	
<i>relative humidity between thresholds 2 and 3</i>	<i>Scene 1 .. scene 64</i>	
<i>relative humidity is greater than threshold 3</i>	<i>Scene 1 .. scene 64</i>	
<i>Behaviour when setting the lock</i>	<i>Ignore lock</i> <i>do not send</i> <i>send scene</i>	The scene object cannot be locked The scene object will not send as long as the lock object is set Send a value when setting lock object.
<i>scene if locked</i>	<i>Scene 1 .. scene 64</i>	Scene to be sent when the lock object is set
<i>Behaviour when cancelling the lock</i>	<i>do not send</i> <i>update</i>	no reaction send current scene

3.3.11 Temperature threshold *parameter page*

Designation	Values	Application
Temperature threshold	1 °C ... 40 °C Default value = 15 °C	Input of desired temperature threshold in °C
Hysteresis	1.0 °C, 1.5 °C 2.0 °C, 2.5 °C	The hysteresis prevents frequent switching after small temperature changes. See accessories: Hysteresis
Telegram type for temperature threshold	<i>Switching command</i> <i>Priority</i> <i>Value as percentage</i> <i>Value from 0 to 255</i>	The threshold sends: Switching telegrams Priority telegrams Any percentage value Any value between 0 and 255
If temperature threshold is under-run	<i>no telegram</i> <i>send following telegram once</i> <i>send cyclically</i>	Response to exceeding threshold
Telegram	<i>Switch-on command</i> <i>Switch-off command</i>	What is sent if the threshold is exceeded or under-run? The parameter values depend on the type of telegram selected: With <i>switching command</i>
	<i>no priority</i> <i>OFF (up)</i> <i>ON (down)</i>	With <i>priority</i>
	<i>0%, 5%, 10%, 15%, 20%, 25%</i> <i>30%, 35%, 40%, 45%, 50%</i> <i>55%, 60%, 65%, 70%, 75%</i> <i>80%, 85%, 90%, 95%, 100%</i>	With <i>percentage value</i>
	<i>manual input: 0 .. 255</i>	With <i>Value from 0 to 255</i>
If temperature threshold under-run	<i>no telegram</i> <i>send following telegram once</i> <i>send cyclically</i>	Response to under-running threshold
Telegram	see above	see above
Cycle time for temperature threshold (if available)	<i>every minute, every 2 minutes</i> <i>every 3 minutes, every 5 minutes</i> <i>every 10 minutes, every 15 minutes</i> <i>every 20 minutes, every 30 minutes</i> <i>every 45 minutes, every 60 minutes</i>	At what time interval are the cyclic telegrams to be sent again?

Continuation:

Designation	Values	Application
Behaviour when setting the lock	<i>Ignore lock</i> <i>do not send</i> <i>as with under-run threshold</i> <i>as with exceeded threshold</i>	This threshold cannot be locked The threshold will not send as long as the lock object is set When setting the lock object, the threshold sends the same telegram as with threshold under-run. When setting the lock object, the threshold sends the same telegram as with exceeding the threshold.
Behaviour when cancelling the lock	<i>do not send</i> <i>update</i>	no reaction send current status

4 Typical applications:

4.1 Control of air quality via CO₂ dependent ventilation

A fan will provide fresh air if the CO₂ content exceeds the set thresholds.

4.1.1 Devices

- Amun 716 KNX (716 9 200)
- FCA 1 (492 0 200)

4.1.2 Overview



Figure 1

4.1.3 Objects and links

Table 15

No.	Amun 716 KNX Object name	No.	FCA 1 Object name	Comments
9	<i>CO₂ ventilation</i>	0	<i>Actuating value for fan</i>	Ventilation control depending on CO ₂ content.

4.1.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

Amun 716

The standard values can be used here.

The desired ventilation speeds are set on the *CO2 ventilation* parameter page. See accessories: [Fan control](#).

Table 16: FCA 1

Parameter page	Parameters	Setting
<i>General</i>	<i>Supported function</i>	<i>Ventilation</i>

4.2 Control of air quality via CO₂ and humidity dependent ventilation

A fan will provide fresh air if the humidity or CO₂ content exceeds the set thresholds.

4.2.1 Devices

- Amun 716 KNX (716 9 200)
- FCA 1 (492 0 200)

4.2.2 Overview



Figure 2

4.2.3 Objects and links

Table 17

No.	Amun 716 KNX	No.	FCA 1	Comments
	Object name		Object name	
25	Highest active ventilation value	0	Actuating value for fan	Fan control dependent on CO ₂ and relative humidity

4.2.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

Amun 716

The standard values can be used here.

The desired ventilation speeds are set on the *Ventilation of CO₂* and *Humidity ventilation* parameter pages. See accessories: [Fan control](#)

Table 18: FCA 1

Parameter page	Parameters	Setting
<i>General</i>	<i>Supported function</i>	<i>Ventilation</i>

4.3 Control of air quality plus 3 stage manual fan control

A fan will provide fresh air if the humidity or CO₂ content exceeds the set thresholds. There is a choice of 3 manual fan stages (forced operation mode). A 4-way sensor interface is used here (TA 4).

Button layout:

Channel / button 1	Start forced stage 1
Channel / button 2	Start forced stage 2
Channel / button 3	Start forced stage 3
Channel / button 4	Restore automatic operation

After reset or restoration of bus power the fan operates in automatic mode, i.e. depending on CO₂ content and humidity. If any of buttons 1...3 are pressed, FCA 1 switches to forced operation and assumes the associated fan stage configured in TA 4. Automatic mode can be restored using button 4.

4.3.1 Devices

- Amun 716 KNX (716 9 200)
- FCA 1 (492 0 200)
- TA 4 (496 9 204)

4.3.2 Overview

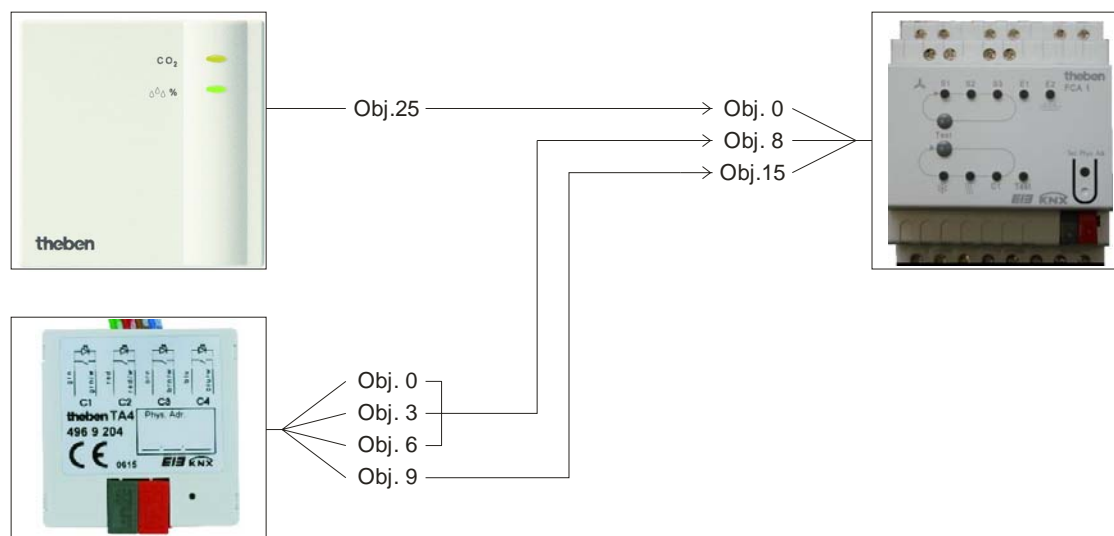


Figure 3

4.3.3 Objects and links

Table 19

No.	Amun 716 KNX	No.	FCA 1	Comments
	Object name		Object name	
25	Highest active ventilation value	0	Actuating value for fan	Fan control dependent on CO ₂ and relative humidity

Table 20:

No.	TA 4	No.	FCA 1	Comments
	Object name		Object name	
0	Channel 1 Valuator	8	Forced fan stage	Manual stage 1 in forced operation mode
3	Channel 2 Valuator			Manual stage 2 in forced operation mode
6	Channel 3 Valuator			Manual stage 3 in forced operation mode
9	Channel 4 switching	15	Fan auto/forced mode	Automatic mode: Fan is controlled by Amun 716.

4.3.4 Important parameter settings

Standard or customer-defined parameter settings apply to unlisted parameters.

Amun 716

The standard values can be used here.

The desired ventilation speeds are set on the *Ventilation of CO₂* and *Humidity ventilation* parameter pages.

Table 21: FCA 1

Parameter page	Parameters	Setting
<i>General</i>	<i>Supported function</i>	<i>Ventilation</i>
	<i>Switch fans between auto and forced</i>	<i>via object auto/forced, Forced = 0</i>

Table 22: TA 4

Parameter page	Parameters	Setting
Channel 1..3	<i>Channel function</i>	<i>Switch/key</i>
	<i>Object type</i>	<i>Value 0.. 255 (1 byte)</i>
	<i>Response to rising edge</i>	<i>desired ventilation speed for each forced stage</i>
	<i>Response to falling edge</i>	<i>None</i>
Channel 4	<i>Channel function</i>	<i>Switch/key</i>
	<i>Object type</i>	<i>Switching (1-bit)</i>
	<i>Response to rising edge</i>	<i>On</i>
	<i>Response to falling edge</i>	<i>None</i>
	<i>Response after restoration of the bus supply</i>	<i>None</i>

4.4 Dew point alarm for cooling system

A RAM 713 FC room thermostat and an FCA 1 fan coil actuator control a cooling system.

Once humidity has reached a set threshold value (80 %), an alarm telegram is sent to prevent further cooling and an increase in humidity

4.4.1 Devices

- Amun 716 KNX (716 9 200)
- FCA 1 (492 0 200)
- RAM 713 FC

4.4.2 Overview

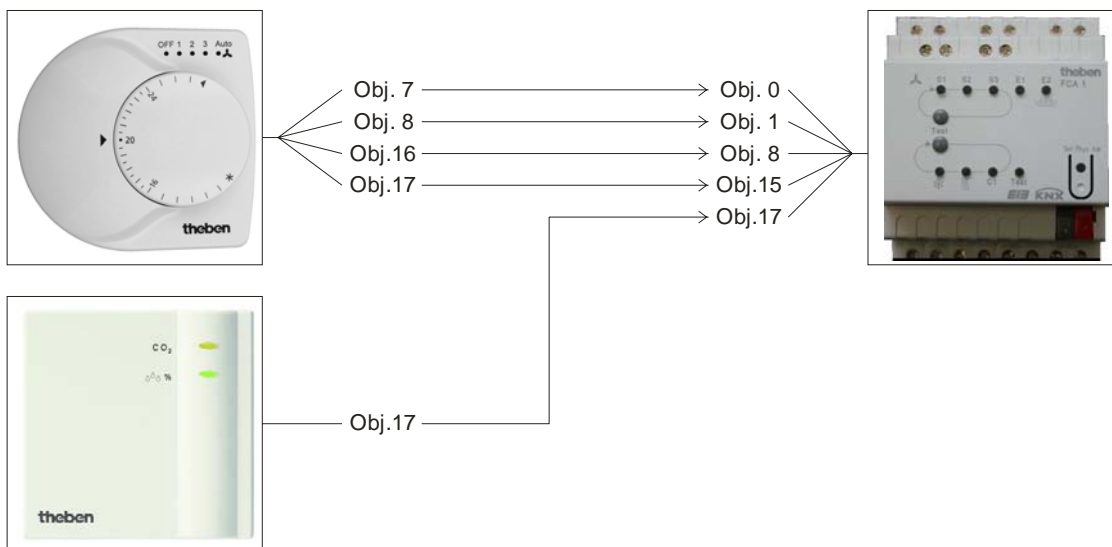


Figure 4

4.4.3 Objects and links

Table 23

No.	Amun 716 KNX	No.	FCA 1	Comments
	Object name		Object name	
17	<i>Humidity threshold 3</i>	17	<i>Dew point alarm</i>	Do not cool any further, humidity is too high.

Table 24: Links

No.	RAM 713 FC	No.	FCA 1	Comments
	Object name		Object name	
7	<i>Heating control variable</i>	0	<i>Heating control variable</i>	FCA receives the heating and cooling control variables from RAM 713 S
8	<i>Cooling control variable</i>	1	<i>Cooling control variable</i>	
16	<i>Forced fan stage</i>	8	<i>Forced fan stage</i>	% value for forced mode
17	<i>Fan forced/auto mode</i>	15	<i>Fan Forced = 1 / Auto = 0</i>	Trigger for forced mode

4.4.4 Important parameter settings

Standard or customer-defined parameter settings apply for unlisted parameters.

Table 25: Amun 716

Parameter page	Parameters	Setting
<i>Humidity thresholds</i>	<i>Relative humidity threshold 3 (in %)</i>	80 %
	<i>Hysteresis</i>	5 %
<i>Humidity threshold 3</i>	<i>Telegram type for humidity threshold 3</i>	<i>Switching command</i>
	<i>If humidity threshold 3 exceeded</i>	<i>send following telegram once</i>
	<i>Telegram</i>	<i>Switch-on command</i>
	<i>If humidity threshold 3 under run</i>	<i>Switch-off command</i>

Table 26: FCA 1

Parameter page	Parameters	Setting
<i>General</i>	<i>Supported function</i>	<i>Heating and cooling</i>
	<i>System type</i>	<i>4-pipe system</i>
	<i>Type of controller used</i>	<i>Remote controller</i>
<i>Heating valve</i>	<i>Type of valve</i>	<i>2-point</i>
<i>Cooling valve</i>	<i>Type of valve</i>	<i>2-point</i>

Table 27: RAM 713 FC

Parameter page	Parameters	Setting
<i>Settings</i>	<i>Device type</i>	<i>RAM 713 Fan Coil</i>
<i>Control</i>	<i>Fan coil system used</i>	<i>4-pipe system</i>
<i>Operation mode</i>	<i>Objects for determining the operation mode</i>	<i>alt.: Comfort, night, frost</i>

5 Appendix

5.1 Hysteresis

The hysteresis determines the difference between switching on and off value. With the Amun 716 it is unilaterally negative.

Without hysteresis, the threshold control would switch on and off continuously provided the actual value is within the setpoint value range.

Example CO₂ threshold:


Threshold 1 = 500 ppm, hysteresis = 100 ppm.

The threshold is exceeded if the actual value rises to, or above, 500 ppm.

It is under run if the actual value falls below the "hysteresis setpoint value"

i.e. 500 ppm – 100 ppm = 400 ppm drops.

5.2 Switching behaviour of thresholds for CO₂ and humidity

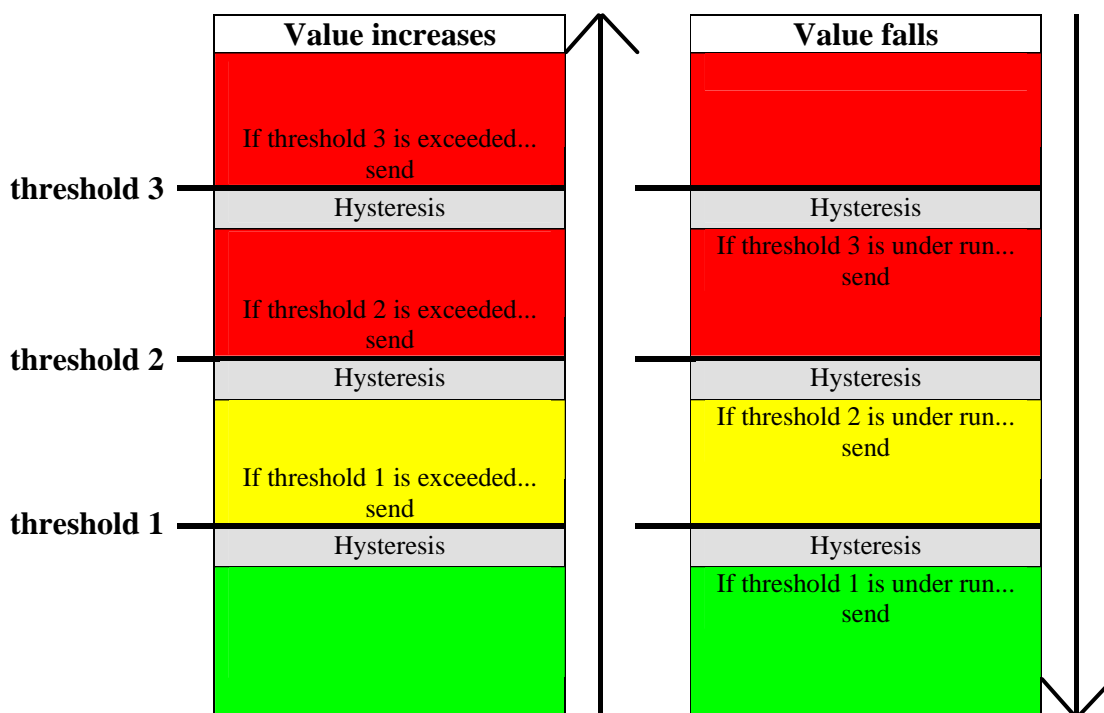

The telegram of the last exceeded/under run threshold is sent.

If several thresholds are exceeded from one measurement cycle to the next then the telegrams are sent at an increasing value (from thresholds 1-3) whereas with cyclical sending, only the telegram for the last exceeded threshold is sent cyclically. The same applies with falling values.

5.3 Fan control

Note the following for fan control using percentage values:

Amun sends a percentage value as the control variable for each threshold. This control variable (in accordance with the set threshold value) is transferred to the fan coil actuator as a fan stage between 0 and 3.

Important: The sent control variable should always be higher than the threshold setting of the fan coil actuator.

Example:

Threshold value for Fan stage	Set values for Amun 716	Recommended values for FCA 1
1	20 %	10 %
2	50 %	40 %
3	80 %	70 %

If fan stage 2 is selected using the button, the relevant object (object 9 or 19) sends the control variable 50 %.

As the threshold value for stage 2 in the fan coil actuator is set at 40 % , the received control variable of 50 % is clearly allocated to fan stage 2 and accepted by the fan.

5.4 Relative humidity

Relative humidity is a measurement for the saturation of air with water vapour. This is expressed as the relationship to the maximum amount absorbed at the corresponding temperature.


Example: A relative humidity of 60 % means that the air contains 60 % of the maximum absorbable amount of water vapour.

At 100 % the air is completely saturated and cannot absorb any more humidity.

Condensation or mist are produced if the volume of available water vapour exceeds this 100 % threshold .

The ability of air to absorb water vapour depends on temperature. Warm air can absorb more water vapour than cold air.

5.5 CO₂ guide values

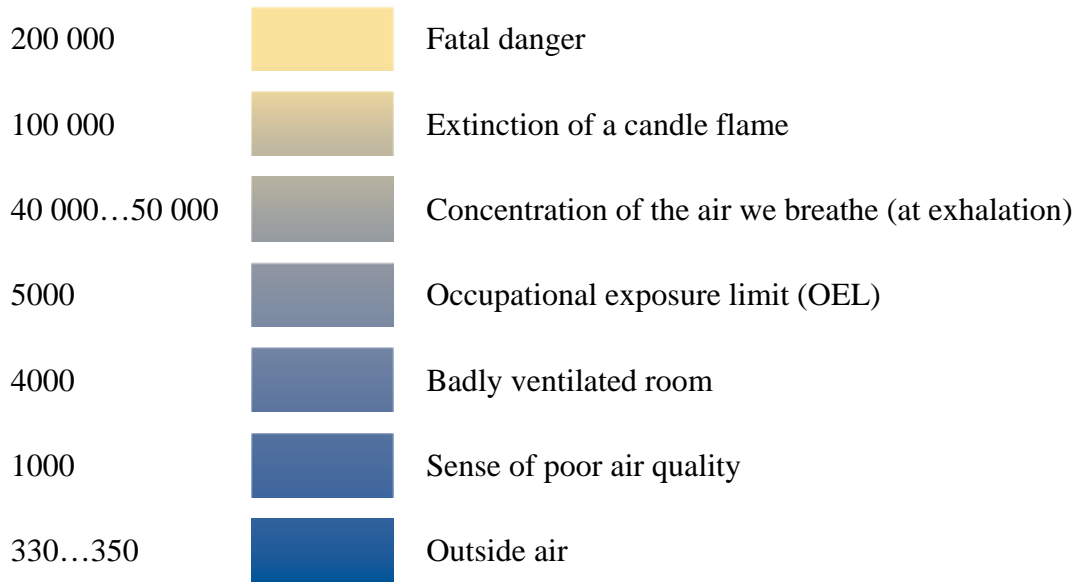

All values in ppm (parts per million)