



## OSIRIA Wall Clocks

### Installation / operation manual "Single-sided - Wall Clock"

- Connect the KNX installation bus on the operation component via the bus connection terminal.

### Programming physical addresses and the application program

- Quickly press the "Set Phys.Adr." key (red programming LED must light up)
- Carry out the programming the physical addresses and the application program in the clock with the KNX-Tool software.

### Initial start-up

- When receiving carrier signals for the first time, the hands are put after 20 seconds in the zero position (12:00 position) at first. Then the clock automatically sets to the current time.

### Transportation lock / Resetting

- Remove the bus connection terminal.
- Press the "Reset Clock" key for approx. 1 second.
- After releasing the "Reset Clock" key, it will reset to the zero position (12:00 position).
- The clock is ready for transport when the hands are in the 12:00 position.

### Troubleshooting

- Same procedure as with the point "Transportation lock"
- Connect the KNX installation bus on the operation component via the bus connection terminal.
- The clock automatically resets after it has received a carrier signal (as in initial start-up).

THEBEN AG, Hohenbergstraße 32, 72401 Haigerloch, GERMANY  
Telephone 07474 / 692-0, Fax 07474 / 692-150  
[www.theben.de](http://www.theben.de), E-Mail: [info@theben.de](mailto:info@theben.de)